
Smart SMD Tester

USER'S MANUAL

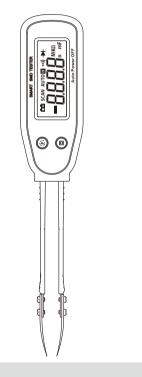

Smart SMD Tester

1. Introduction

The Tester is a handheld and battery operated very convenient small.

Tool that is specially used to measuring SMD (Surface Mounting Device), there are Chip type resistor, Chip type capacitor and diode, for example.

Moreover, the Tester have the continuity checking function The Tester is automatically identified the passive Component as has been indicated above. Therefore, the measurement are allowed by fully automatic detection. The Tester is designed to meet IEC1010-1 standard and Stipulation of 2-Poulation Grade. The Tester conform to the European Union's following Requirement: CE regulation 89/336 (EMC Electromagnetic Compatibility).

The entire outer surface of the Tester case has been with thermo plastic elastomer, and the two testing pins has been gold-plated, so that it is reduce pin contact resistance and prevent to get rusty.

This operating instruction covers information on safety and caution,

so please read relevant information carefully and observe all the warming and note strictly.

Check the Meter and accessories thoroughly before using the Meter. Contact your local distributor if the Meter or any components are damaged or malfunction

Smart SMD Tester

2. Safety Note

The following safety notes should be observed prior to using This Tester and any associated accessory. Although the Tester do not used to measuring DC/AC Voltage or Current, but there are situations where hazardous condition may be present.

- Inspect the Tester case before using. Do not use damaged device.
- Inspect the Pin Holder and Pin gold-plated state.
- Do not attempt use the Tester as tweezers to prevent the pin tip
- from damage.
- Do not apply external voltage between the two pins.
- Do not used in the environment with explosive gas, vapor, or dust.

20

⚠ Caution


Never use the Tester on alive circuits.

Accessories

1x Case

User's Manual
1x 3V CR2032 Battery

3.1 Product Illustration

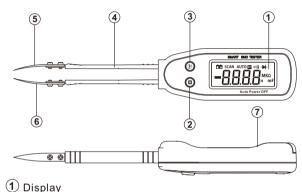

(2) "(a) " Button: holds current reading on screen
(3) "(a) " Button: switches between measurements
(4) Test needle arms
(5) INPUT test needle(+)
(6) COM test needle(-)

(7) Battery cover

Smart SMD Tester

3. Explanation Of Control And Indicators

Smart SMD Tester

3.2. Push Buttons

[1] " (2) ": it is the function select key that acts trigger. Use the Push Button as switch of Resistanc/ Capacitance/Diode/Continuity. The Tester is have not Power Key. When install the 3V Lithium Battery, the Tester immediately power ON. Once powered on, the Tester will perform the Scanning Mode and then the 'SCAN' and '----' sign is displayed on the LCD. This is indicate the Tester is inter to the auto scanning mode and will be automatically identify the resistor, capacitor, diode and continuity measurement mode.

The" ⁽¹⁾ "Button is used to selecting some one measurement mode manually.

[2] " (2) ": Press " (2) " Button to enter or exit the hold mode In any measurement mode. This key is act with trigger. In the data hold mode, the Tester stop updating LCD, stored current measuring data and displayed the measured data, and then holding the data until press the " (2) " key once again.

Note: after auto power-OFF is active, pushing any of the push button can turn on the Tester again.

Smart SMD Tester

3.3. LCD Display



NO	Indicator	Meaning	
1	SCAN	Automatic Scan Mode	
2	AUTO	Auto Range	
3	E	Hold	
4		Diode	
5	((10	Continuity	
6	nµmF	Capacitance Units(nF, µF, mF)	
7	ΜΚΩ	Resistance Units(Ω , K Ω , M Ω)	
8	÷-	Low Battery Indicator	

Smart SMD Tester

4. Specification

4.1. General Feature

• 3000 count LCD display.

- Full automatic measurement: Auto scanning the Resistance/Capacitance/Diode.
- Function selection by one " (2) " Push Button
- Data Hold function
- Continuity Checking function
- Over Load Indication ('OL')
- Low Battery Indication
- Power Supply: 3V Lithium Battery (CR2032), 1pc
- Test Pins is Gold-Plated.
- Auto Power OFF. If the Tester is idle for more than 10 minutes.

The Tester Automatically Turns The Power Off.

- Operating temperature & Humidity: 0 ~ 40°C (32~104 °F) & < 80% RH
- Storage temperature & Humidity: -10 ~ 50°C (14~122°F) & <70%RH
- Safety Class: IEC1010-1, CAT II
- EMC: According to CE regulation 89/336
- Dimension (L x W x H) & Weight: 175x32x20mm. Approx. 48 g
- Environmental condition:
- (1) Indoor use:
- (2) Altitude up to 2000meter.

Smart SMD Tester

4.2 Technical Specifications

Continuity Test

Function
Built-in buzzer will sound if resistance is lower than 30Ω .

Diode Test

	Resolution	Function
₩	1mV	Displaying approximate forward voltage of diode

Forward DC current: ~2mA Open Circuit Voltage: ~2.8V

Resistance

Range	Resolution	Accuracy
300Ω	0.1Ω	
3kΩ	1Ω	
30kΩ	10Ω	±(1.0% of reading + 2 digits)
300kΩ	100Ω	
3MΩ	1kΩ	
30MΩ	10kΩ	± (1.2% of reading + 3 digits)

07

Smart SMD Tester

Capacitance

Range Resolution		Accuracy	
3nF	1pF		
30nF	10pF	7	
300nF	100pF	\pm (2.5% of reading + 3 digits)	
3µF	1nF		
30µF	10nF	7	
300µF	100nF		
3mF	1µF	± (3.0% of reading + 3 digits	
30mF	10µF	7	

5. Testing Operation 5.1 Scanning Mode

When install the 3V Lithium Battery, the Tester immediately power ON. In this case, the 'SCAN' and '----' sign is displayed on the LCD. This is indicate the Tester is inter to the auto scanning mode and automatically identified the resistor, capacitor, diode and continuity, and then enter to the corresponding measurement mode.

In the Scanning Mode, when two pins are in touch with the object being measured, the measured value will be displayed on the LCD.

Smart SMD Tester

▲ Caution

When measuring SMD device on the PCB, You must be Disconnect power and discharge all high-voltage Capacitors.

5.2. Resistance Measurement

- [1] Auto scanning Mode & Auto range: 300.0Q - 3.000MQ
- [2] Selected Resistance measurement Mode by the "FUNC" kev:
- The range is extended to 30 M Ω , i.e. 300.0 Ω -30.00M Ω When over load, the 'OL' symbol will be displayed on the LCD.

5.3. Capacitance Measurement

[1] Auto scanning & Auto range: 3.000nF - 300.0uF. [2] Selected Capacitance Mode by the " (2) " key:

The range is extended to 30.00mF. i.e. 3.000nF-30.00mF.

▲ Caution

To avoid damage to the Meter or to the equipment under test, disconnect power and discharge all high -voltage capacitors before measurement capacitance.

ш	
_	_

Smart SMD Tester

5.4 Diode Check

You can selecting the Scanning Mode or the Diode Mode by The " 🕲 " push button.

- (1) Use the diode test mode to check diodes, transistors and other semiconductor device. In the diode test mode sends a current through the semiconductor iunction, and the measure the voltage drop across the junction. A good silicon junction drop between 0.5V - 0.8V.
- 2 For forward voltage drop reading on any semiconductor component, the test pin(connected to the 'INPUT' terminal) is in touch with the component anode and the another test pin is in touch with on the component cathode. The measured value show on the LCD.
- (3) Reverse the test pin and measure the voltage across the diode again.
- If diode is good, the display shows "OL".
- If diode is shorted, the display shows 0 (zero) in both direction
- If display shows "OL" in both direction, the diode is open.

Smart SMD Tester

5.5. Continuity Check

May selecting Scanning Mode or Continuity Mode by " @ " push button.

When the resistance reading is less than 30Ω , the buzzer generates 2KHz beep to indicate continuity.

6. Maintenance

6.1. Replacing The Battery

When meter display 👘 , the battery must be replace to maintain normal operation.

- (1) Open the battery cover on the bottom case by screwdriver.
- 2 Remove old battery and snap new one into battery holder

Note:

Lithium Battery type: 3V CR2032

6.2. Cleaning

The meter can be cleaned with soft clean cloth to remove anv oil, grease or grim.

Do not use liquid solvent or detergent.



R-00-05-0407