

VOLT DeTec

Always On With **Flash LIGHT**

- Test voltage range: 90V AC to 1000V AC
- The power supply: AAA 1.5V×2
- Bright white LED Flash light
- Tip glows red when voltage present

Warning!




If this product is used in a manner not specified by the manufacturer, protection provided by the product may be affected.

- DO NOT PLACE VOLT DeTec NEAR VOLTAGE OVER 1000V AC


How to Test

Placing the tip of the unit near on AC voltage produces a steady glow at the tip and a continual beep.

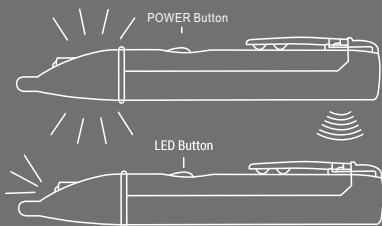

Replace batteries

Please replace the batteries inside if the light and sound are weak. please refer to the following picture to replace batteries.

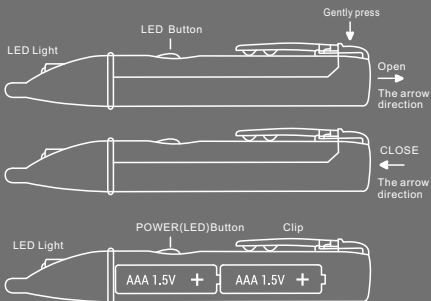

Battery life

6 Hours continuous use. Standby for 1.5 years